




Novattach™

Truss, Ceiling Pendant Mount Assembly & Installation Procedure


****IMPORTANT NOTE!!!**

**DO NOT USE POWER TOOLS TO ASSEMBLE
Novattach™. We recommend an Allen wrench or
bit with ratchet handle.**


- 1) Cut or acquire a 1 ¼" diameter piece of standard EMT steel conduit of any desired length.
- 2) Insert one end of the EMT conduit into the Novattach™ Truss Mount clamp until it cannot go any further (approx. 43mm or 1.7")

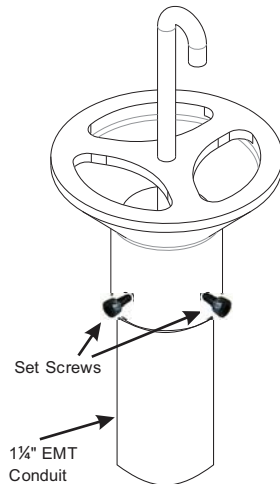


- 3) Tighten set screws until conduit is firmly attached to the Novattach™ Truss Mount clamp and tighten until bolt head is all the way to the end of the thread against the head unit. ****DO NOT OVER-TORQUE THESE SCREWS OR IT MAY STRIP THE THREAD**

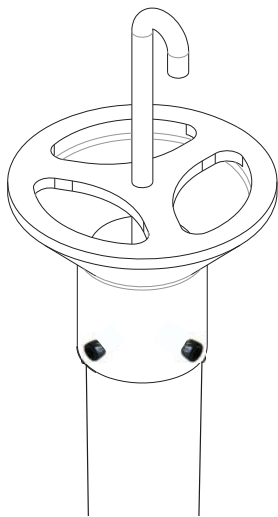

- 4) Insert the other end of the conduit into a **Novattach™** brand **UMA1** multi-thread adapter.

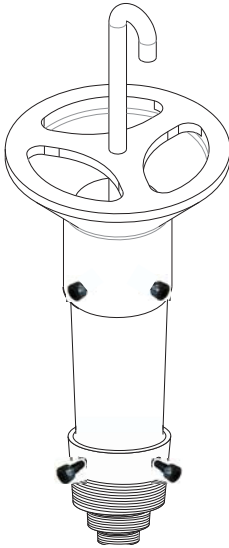

- 5) Tighten set screws until conduit is firmly attached to the **Novattach™** brand **UMA1** multi-thread adapter and tighten until bolt head is all the way to the end of the thread against the head unit. ****DO NOT OVER-TORQUE THESE SCREWS OR IT MAY STRIP THE THREAD**

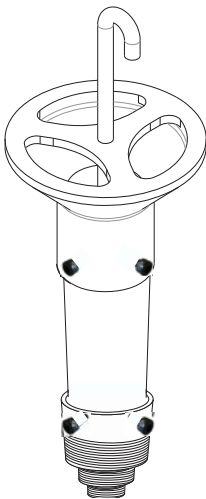

- 6) Attach the camera, speaker, WAP or other device to the **Novattach™** brand **UMA1** multi-thread adapter.